

Software-Defined Networking (SDN) Deployment Guide

Version 1.0



Notes, Cautions, and Warnings



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2013 Dell Inc.

Trademarks used in this text: Dell™, the Dell logo, Dell Boomi™, Dell Precision™, OptiPlex™, Latitude™, PowerEdge™, PowerVault™, PowerConnect™, OpenManage™, EqualLogic™, Compellent™, KACE™, FlexAddress™, Force10™ and Vostro™ are trademarks of Dell Inc. Intel®, Pentium®, Xeon®, Core® and Celeron® are registered trademarks of Intel Corporation in the U.S. and other countries. AMD® is a registered trademark and AMD Opteron™, AMD Phenom™ and AMD Sempron™ are trademarks of Advanced Micro Devices, Inc. Microsoft®, Windows®, Windows Server®, Internet Explorer®, MS-DOS®, Windows Vista® and Active Directory® are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Red Hat® and Red Hat® Enterprise Linux® are registered trademarks of Red Hat, Inc. in the United States and/or other countries. Novell® and SUSE® are registered trademarks of Novell Inc. in the United States and other countries. Oracle® is a registered trademark of Oracle Corporation and/or its affiliates. Citrix®, Xen®, XenServer® and XenMotion® are either registered trademarks or trademarks of Citrix Systems, Inc. in the United States and/or other countries. VMware®, Virtual SMP®, vMotion®, vCenter® and vSphere® are registered trademarks or trademarks of VMware, Inc. in the United States or other countries. IBM® is a registered trademark of International Business Machines Corporation.

2013-01

Rev. A0X

Contents

Notes, Cautions, and Warnings.....	2
1 OpenFlow 1.0 Support.....	5
Unsupported OpenFlow Messages.....	5
Limitations.....	5
2 Exceptions.....	7
ACL Flow Exceptions.....	7
L3 Flow Exceptions.....	7
L2 Flow Exceptions.....	8
Learning Bridge (LB) Flow Exceptions	8
3 Flow Types.....	9
ACL Flows.....	9
L3 Flows.....	9
L2 Flows.....	10
Learning Bridge (LB) Flows.....	10
Max Limits.....	10
4 Flow Setup.....	13
Sample Topology.....	13
ACL Flows.....	14
L3 Flows.....	15
L2 Flows.....	16
Learning Bridge (LB) Flows.....	17
Packet Trace.....	17
5 Configuring ACL CAM Carving on S4810.....	19
6 Configuring ACL CAM Carving on Z9000.....	21
7 OpenFlow Instances.....	23
8 OpenFlow Interfaces.....	25
OF Ports.....	25
OF VLANs.....	25
9 SDN Commands.....	27

connect retry-interval.....	27
Z-Series, S4810.....	27
controller	28
Z-Series, S4810.....	28
debug openflow packets.....	28
Z-Series, S4810.....	28
flow-map.....	30
Z-Series, S4810.....	30
interface-type.....	30
Z-Series, S4810.....	30
learning-switch-assist.....	31
Z-Series, S4810.....	31
multiple-fwd-table enable.....	31
Z-Series, S4810.....	31
of-instance (Interface).....	32
Z-Series, S4810.....	32
openflow of-instance.....	33
Z-Series, S4810.....	33
show openflow.....	34
Z-Series, S4810.....	34
show openflow flows.....	35
Z-Series, S4810.....	35
shutdown (OpenFlow Instance).....	35
Z-Series, S4810.....	35

OpenFlow 1.0 Support

OpenFlow (OF) 1.0 [STD-1] is supported on the S4810 and Z9000 platforms.

Unsupported OpenFlow Messages

The following section provides a list of OpenFlow messages that are not supported.

Table 1. Unsupported OpenFlow Messages

Message	System Response
OFPT_SET_CONFIG	This message is ignored by the switch.
OFPT_QUEUE_GET_CONFIG_REQUEST	OFPT_ERROR is generated in response.
OFPT_PORT_MOD	OFPT_ERROR is generated in response.
Emergency Flows (OFPPF_EMERG)	OFPT_ERROR is generated in response.
Queue Statistics (OFPST_QUEUE)	OFPT_ERROR is generated in response.

For supported flow-match and flow action parameters for each flow type, refer to [FlowTypes](#).

The following section provides a list of actions that are not supported for any flow types. All of the following commands generate an OFPT_ERROR message.

- OFPAT_STRIP_VLAN
- OFPAT_SET_NW_SRC (set src-ip)
- OFPAT_SET_NW_DST (set dst-ip)
- OFPAT_SET_TP_SRC (set tcp/udp src-port)
- OFPAT_SET_TP_DST (set tcp/udp dst-port)
- OFPAT_ENQUEUE
- OFPAT_OUTPUT to OFPP_IN_PORT
- OFPAT_OUTPUT to OFPP_TABLE
- OFPAT_OUTPUT to OFPP_NORMAL
- OFPAT_OUTPUT to OFPP_LOCAL

Limitations

- OFPAT_OUTPUT to OFPP_FLOOD and OFPP_ALL are supported on the S4810 only. These commands are not currently supported on Z9000.
- Multiple output ports are supported on S4810 only. Multiple output ports are not currently supported on Z9000.
- The set/modify actions must precede the "output ports" actions. This means that the switch cannot transmit different copies if you specify multiple output ports.

Exceptions

This section describes the constraints of OpenFlow.

- Dell Force10 switches can operate as Hybrid switches (switches running OpenFlow and legacy functions simultaneously). You cannot enable Legacy functionality (switching and routing) on OF ports or OF VLANs, as these interfaces are controlled by an OpenFlow controller and are not available.
- Stacking OpenFlow switches is not supported for the S4810. If stacking is configured but disabled in preparation for future stacking, the stack unit number must be zero to enable OpenFlow on S4810 switches.
- For OF ports and OF VLANs, the VLAN IDs used for OpenFlow must be unique; the VLAN IDs cannot be used for legacy functionality on the same switch.
- Dell Force10 does not recommend using global spanning tree protocol (STP) instances on ports with both legacy VLANs and OF VLANs.
- Transport Layer Security (TLS) connections are not supported.
- Because controllers typically run their own version of link layer discovery protocol (LLDP), legacy LLDP should be disabled by the administrator on OF ports.
- To avoid session timeout issues if the system clock is changed, all existed OF instances should be disabled, then re-enabled .
- Controller high availability (HA) is not supported.
- Emergency flows are not supported.
- Packet buffering is not supported.
- Data Center Bridging (DCB) and iSCSI are not supported on OpenFlow interfaces.
- The following packet types can only be copied to the controller and cannot be forwarded from a physical switch port:
 - STP BDPU
 - LLDP
 - GVRP
 - ARP Replies
 - 802.1x frames
 - untagged broadcast packets received on an OF port

ACL Flow Exceptions

- Flooding (action “output=all” or “output=flood”) is supported on S4810 only.
- By default, ACL flows override flows installed in the L2 or L3 tables.
- ARP opcode, sender IP, and target IP matching are not supported.

L3 Flow Exceptions

- Non-zero integers for the idle timeout are not supported and are ignored for L3 flows; L3 flows are not aged out.
- For L3 flows, flow priority is not applicable; instead, the dst-ip network mask length is used to prioritize the flow. For example, a L3 flow with a dst-ip network mask length of 32 has priority over a flow with a dst-ip network mask length of 31.

- TTL is decremented for traffic forwarded using L3 flows.

L2 Flow Exceptions

- If you specify a non-zero idle timeout value for an L2 flow, the flow is aged out according to the MAC address table aging time configured on the switch if there is no activity or traffic. The idle timeout value specified in individual flows is ignored. If the idle timeout value is zero, the flow is not aged.
- Flow priority is ignored for L2 flows.

Learning Bridge (LB) Flow Exceptions

- If you specify a non-zero idle timeout value for an LB flow, the flow is aged out according to the MAC address table aging time configured on the switch if there is no activity or traffic. The idle timeout values specified in individual flows are ignored. If the idle timeout value is zero, the flow is not aged.
- Flow priority is ignored for LB flows.
- Dell Force10 does not recommend station moves in an LB flow configuration.
- Parallel links or paths may not work in an LB flow configuration; Dell Force10 recommends using port channels instead.

Flow Types

Dell Force10 switches support four types of flows:

- Access Control List (ACL)
- L2
- L3
- Learning Bridge (LB)

The following sections describe the mandatory match fields, optional match fields, mandatory actions, and optional actions for each flow type.

ACL Flows

Parameter Type	Parameters
Mandatory match fields	None; any of the match parameters can be wildcards.
Optional match fields	All 12 match fields defined in OpenFlow (OF) 1.0 are supported.
Mandatory actions	None.
Optional actions	<ul style="list-style-type: none"> • <code>set_vlan_id</code> • <code>set_vlan_pcp</code> • <code>set_dl_src</code> (set src-mac) • <code>set_dl_dst</code> (set dst-mac) • <code>set_nw_tos</code> • output to one or more switch ports



NOTE: For output action limitations, refer to [OF 1.0 Support](#).

L3 Flows

Parameter Type	Parameters
Mandatory match fields	<ul style="list-style-type: none"> • You must specify <code>dl_dst</code> (dst-mac) as the switch's port mac. • You must specify <code>dl_type</code> (ether-type) as 0x800.

Parameter Type	Parameters
Optional match fields	<ul style="list-style-type: none"> • <code>nw_dst</code> (dst-ip) • All fields other than the ones listed in “Mandatory match fields” and “Optional match fields” must be wildcards.
Mandatory actions	<ul style="list-style-type: none"> • You must specify <code>set_dl_src</code> (set src-mac) as the port mac (local mac) for the switch. • <code>set_dl_dst</code> (set dst-mac) • Single <code>OFFPAT_OUTPUT</code> action to a switch port.
Optional actions	<code>OFFPAT_SET_VLAN</code> is optional for OpenFlow (OF) ports and mandatory for OF virtual local area networks (VLANs).

L2 Flows

Parameter Type	Parameters
Mandatory match fields	<ul style="list-style-type: none"> • <code>dl_vlan</code> (input vlan id) • <code>dl_dst</code> (dst-mac)
Optional match fields	All fields other than <code>dl_vlan</code> and <code>dl_dst</code> must be wildcards.
Mandatory actions	Single <code>OFFPAT_OUTPUT</code> action to a switch port.
Optional actions	None.

Learning Bridge (LB) Flows

Parameter Type	Parameters
Mandatory match fields	<ul style="list-style-type: none"> • <code>dl_src</code> (src-mac) • <code>dl_dst</code> (dst-mac) • LB flows will only be installed in the L2 table if bidirectional traffic is present.
Optional match fields	All fields other than the ones listed in “Mandatory match fields” must be wildcards.
Mandatory actions	Single <code>OFFPAT_OUTPUT</code> action to a switch port.
Optional actions	None.

Max Limits

This section defines the maximum number of permitted flow types. The number of available flow types varies depending on the type of flow.

- You can provision up to eight OF instances on each switch.
- The number of flows supported on each switch depends on the flow type.

Flow Type	Max Limit
ACL	256 or 512 (depending on ACL content addressable memory [CAM] carving)
L2	48,000
Learning Bridge (LB)	24,000
L3	6,000

Flow Setup

This chapter describes the configuration options required to set up flows.

Sample Topology

In the following sample topology, two OF instances are shown. of-instance 1 has an interface type of *port* and demonstrates ACL and L3 flows. of-instance 2 has an interface type of *VLAN* and demonstrates ACL, L2, LB, and L3 flows. LB and L2 flows are supported on OF VLANs only.

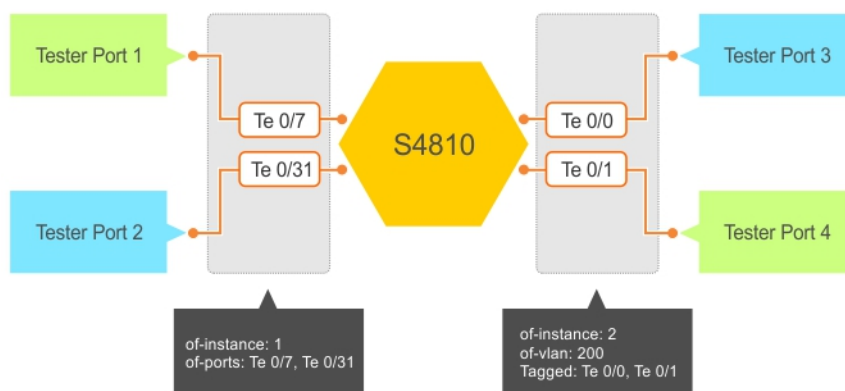


Figure 1. SDN Sample Topology

Use the `show running-config openflow of-instance 1` command to display the following information:

```
FTOS# show running-config openflow of-instance 1
!
openflow of-instance 1
 controller 1 10.11.205.184 tcp
 flow-map 13 enable
 multiple-fwd-table enable
 no shutdown
FTOS# show openflow of-instance 1

Instance           : 1
Admin State        : Up
Interface Type     : Port
DP Id              : 00:01:00:01:e8:8b:1a:30
Forwarding Tbls   : acl,mac,route
Flow map           : 13
LB assist          : disabled
EchoReq interval  : 15 seconds
Connect interval  : 15 seconds
Number of Flows   : 1 (rt:1)
Packets (acl)     : -
Bytes (acl)       : -
Controller 1      : TCP, 10.11.205.184/6633, connected (equal)
```

```

Controller 2      : -
  Port List      :
                  Te 0/7 (8), Te 0/31 (32)
Vlan List        :
Vlan Mbr list    :

```

To display information for the second OF instance, use the `show running-config openflow of-instance 2` command:

```
FTOS# show running-config openflow of-instance 2
```

```

!
openflow of-instance 2
 controller 1 10.11.205.184 tcp
 flow-map l2 enable
 flow-map l3 enable
 interface-type vlan
 learning-switch-assist enable
 multiple-fwd-table enable
 no shutdown

```

```
FTOS#show openflow of-instance 2
```

```

Instance          : 2
Admin State       : Up
Interface Type    : Vlan
DP Id             : 00:02:00:01:e8:8b:1a:30
Forwarding Tbls  : acl,mac,route
Flow map          : l2,l3
LB assist         : enabled
EchoReq interval : 15 seconds
Connect interval : 15 seconds
Number of Flows  : 0
Packets (acl)    : -
Bytes (acl)       : -
Controller 1     : TCP, 10.11.205.184/6633, connected (equal)
Controller 2     : -
Port List        :
Vlan List        :
                  Vl 200
Vlan Mbr list    :
                  Te 0/0 (1), Te 0/1 (2)

```

ACL Flows

By default, all flows are treated as ACL flows. No additional configuration is required to set up ACL flows. You can view per-flow and aggregate statistics for ACL flows using the `show openflow of-instance` and `show openflow flows of-instance` commands.

To clear these statistics, use the `clear openflow statistics of-instance` command. The following sample ACL flow was configured using a controller. It matches by `dmac`, `ether-type`, `ip-protocol`, and `tcp-dst-port`, then sets the VLAN ID to 111 and forwards the packet from `Te 0/31`.

```

FTOS#show openflow flows of-instance 1
Instance: 1, Table: acl, Flow: 1, Cookie: 0xa000003c435722
Priority: 32768, Internal Priority: 32768
Up Time: 0d 00:02:34, Hard Timeout: 0 seconds
Idle Timeout: 0 seconds, Internal Idle Timeout: 0 seconds
Packets: 1, Bytes: 64
Match Parameters:
  Valid Match: Etype,DMAC,IP proto,DPort
  In Port     : *                               EType      : ip
  SMAC        : *                               DMAC       : 00:11:11:11:11:11
  VLAN id     : *                               VLAN PCP    : *

```

```

IP TOS      : *                IP proto   : udp
Src IP      : *                Dest IP    : *
Src Port    : *                Dest Port  : 8900
Actions:
  Set VLAN id: 111
  Output: Te 0/31

```

```

FTOS#show openflow of-instance 1
Instance      : 1
Admin State   : Up
Interface Type : Port
DP Id        : 00:01:00:01:e8:8b:1a:30
Forwarding Tbls : acl,mac,route
Flow map      : 13
LB assist     : disabled
EchoReq interval: 15 seconds
Connect interval: 15 seconds
Number of Flows : 1 (acl:1)
Packets (acl) : 1
Bytes (acl)   : 64
Controller 1  : TCP, 10.11.205.184/6633, connected (equal)
Controller 2  : -
Port List     :
               Te 0/7 (8), Te 0/31 (32)
Vlan List     :
Vlan Mbr list :

```

For complete ACL flow formats, refer to [FlowTypes](#) .

L3 Flows

To use L3 flows, you must enable the `multiple-fwd-table` and `flow-map 13` commands, as shown below. If you do not enable either of these commands, L3 flows are added to the ACL table.

```

FTOS#show running-config openflow of-instance 1
!
openflow of-instance 1
 controller 1 10.11.205.184 tcp
 flow-map 13 enable
 multiple-fwd-table enable
 no shutdown

```

The entry for `dst-mac` in the match field and `set-src-mac` in the action set must use the switch's port MAC address. All ports on a Dell Force10 switch are associated with the same MAC address, which you can view using the `show interface` command.

```

FTOS#show interfaces tengigabitethernet 0/0
TenGigabitEthernet 0/0 is up, line protocol is up
Hardware is DellForce10Eth, address is 00:01:e8:8b:1a:32
  Current address is 00:01:e8:8b:1a:32
...

```

You can configure L3 flows on OF ports as well as on OF VLANs. You must specify the `set-vlan-id` option in the action set for OF VLANs. As shown in the following example, the L3 flow in of-instance 1 transmits packets from OF port Te 0/31:

```

FTOS#show openflow flows of-instance 1

Instance: 1, Table: route, Flow: 2, Cookie: 0xfffffffffa17177b0
Priority: 32768, Internal Priority: 0
Up Time: 0d 00:00:13, Hard Timeout: 0 seconds
Idle Timeout: 0 seconds, Internal Idle Timeout: 0 seconds

```

```

Packets: -, Bytes: -
Match Parameters:
  Valid Match: Etype,DMAC,DIP
  In Port      : *
  SMAC        : *
  VLAN id     : *
  IP TOS      : *
  Src IP      : *
  Src Port    : *
  EType       : ip
  DMAC        : 00:01:e8:8b:1a:32
  VLAN PCP    : *
  IP proto    : *
  Dest IP     : 1.1.1.0/24
  Dest Port   : *
Actions:
  Set SMAC: 00:01:e8:8b:1a:32
  Set DMAC: 00:00:00:00:00:11
  Output: Te 0/31

```

The following example shows the sample L3 flow in of-instance 2 transmitting packets from the OF VLAN port Te 0/1:

```

FTOS#show openflow flows of-instance 2

Instance: 2, Table: route, Flow: 3, Cookie: 0xfffffffffa4cb6a2e
Priority: 32768, Internal Priority: 0
Up Time: 0d 00:00:11, Hard Timeout: 0 seconds
Idle Timeout: 0 seconds, Internal Idle Timeout: 0 seconds
Packets: -, Bytes: -
Match Parameters:
  Valid Match: Etype,DMAC,DIP
  In Port      : *
  SMAC        : *
  VLAN id     : *
  IP TOS      : *
  Src IP      : *
  Src Port    : *
  EType       : ip
  DMAC        : 00:01:e8:8b:1a:32
  VLAN PCP    : *
  IP proto    : *
  Dest IP     : 2.2.2.2/32
  Dest Port   : *
Actions:
  Set VLAN id: 200
  Set SMAC: 00:01:e8:8b:1a:32
  Set DMAC: 00:00:00:00:00:22
  Output: Te 0/1

```

For complete L3 flow formats, refer to [FlowTypes](#) .

L2 Flows

L2 flows are only supported on OF VLANs. In the following example, of-instance 2 is used to demonstrate an L2 flow. To use the L2 flow table, you must enable the `multiple-fwd-table` and `flow-map l2` commands, as shown below. If you do not enable either command , L2 flows are added to the ACL table.

```

FTOS#show running-config openflow of-instance 2
!
openflow of-instance 2
 controller 1 10.11.205.184 tcp
 flow-map l2 enable
 flow-map l3 enable
 interface-type vlan
 learning-switch-assist enable
 multiple-fwd-table enable
 no shutdown

```

The example below demonstrates a sample flow in of-vlan 200:

```

FTOS#show openflow flows of-instance 2

Instance: 2, Table: mac, Flow: 4, Cookie: 0xfffffffffac2dbbf2
Priority: 32768, Internal Priority: 0
Up Time: 0d 00:00:09, Hard Timeout: 0 seconds

```



```

Idle Timeout: 0 seconds, Internal Idle Timeout: 0 seconds
Packets: -, Bytes: -
Match Parameters:
  Valid Match: DMAC,Vid
  In Port      : *                EType       : *
  SMAC        : *                DMAC        : 00:22:22:22:22:22
  VLAN id    : 200             VLAN PCP    : *
  IP TOS      : *                IP proto    : *
  Src IP      : *                Dest IP     : *
  Src Port    : *                Dest Port   : *
Actions:
  Output: Te 0/1

```

For complete L2 flow formats, refer to [FlowTypes](#) .

Learning Bridge (LB) Flows

Learning bridge flows are only supported on OF VLANs. In the example below, of-instance 2 represents an LB flow. To use the LB flow table, you must enable the `multiple-fwd-table` and `learning-switch-assist` commands, as shown below. If you do not enable either command, LB flows are added to the ACL table.

```

FTOS#show running-config openflow of-instance 2
!
openflow of-instance 2
controller 1 10.11.205.184 tcp
 flow-map l2 enable
 flow-map l3 enable
 interface-type vlan
 learning-switch-assist enable
 multiple-fwd-table enable
no shutdown

```

The example below shows a sample flow in of-vlan 200:

```

FTOS#show openflow flows of-instance 2
Instance: 2, Table: lb, Flow: 5, Cookie: 0xfffffffffac2dbc22
Priority: 32768, Internal Priority: 0
Up Time: 0d 00:00:03, Hard Timeout: 0 seconds
Idle Timeout: 0 seconds, Internal Idle Timeout: 0 seconds
Packets: -, Bytes: -
Match Parameters:
  Valid Match: InPort,SMAC,DMAC,Vid
In Port      : Te 0/0          EType       : *
  SMAC        : 00:00:00:00:00:11  DMAC        : 00:00:00:00:00:33
VLAN id    : 200             VLAN PCP    : *
  IP TOS      : *                IP proto    : *
  Src IP      : *                Dest IP     : *
  Src Port    : *                Dest Port   : *
Actions:
  Output: Te 0/1

```


For complete LB flow formats, refer to [FlowTypes](#) .

Packet Trace

Enable OpenFlow protocol packet tracing by using the `debug openflow packets packet-type {of-id}` command.

Configuring ACL CAM Carving on S4810

Dell Force10 switches can operate in Hybrid mode, which enables OpenFlow and legacy functionality on the same switch. By default, ACL CAM space is not allocated for OpenFlow. To enable OpenFlow, you must reserve CAM space for OpenFlow using the following commands.

 **NOTE:** The commands to allocate CAM space for OpenFlow on S4810 differ from the commands used for Z9000.

1. Enter a value for `cam-acl`.

Select one of the following values for `cam-acl`:

- 0 (default): No space is allocated for OpenFlow. You must change this value to four or eight to enable OpenFlow.
- 4: Allocates space for up to 242 flow entries (14 entries are reserved for internal purposes from the 256 available flows, leaving 242 entries for use by OpenFlow).
- 8: Allocates space for up to 498 flow entries (14 entries are reserved for internal purposes from the 512 available flows, leaving 498 entries for use by OpenFlow).

The following sample S4810 configuration reserves 512 entries for OpenFlow:

```
FTOS(conf)#cam-acl l2acl 1 ipv4acl 2 ipv6acl 0 ipv4qos 0 l2qos 2 l2pt 0
ipmacacl 0 vman-qos 0 ecfmacacl 0 openflow 8 fcoeacl 0 iscsiopacl 0
```


2. Enter a value for `cam-acl-vlan`.

Select one of the following values for `cam-acl-vlan`:

- 0 (default): No space is allocated for OpenFlow. You must change this value to 1 to enable OpenFlow.
- 1: Enables OpenFlow functionality.

The following sample configuration shows a value of 1 for `cam-acl-vlan`:

```
FTOS(conf)#cam-acl-vlan vlanopenflow 1 vlaniscsi 1
```

 **NOTE:** You must reboot the switch after changing the `cam-acl` and `cam-vlan-acl` values. If you do not reboot the switch, the configuration changes do not take effect.

If BMP 3.0 is enabled, use the command `reload conditional nvram-cfg-change` to perform a reload on the chassis to upgrade any configuration changes that have changed the NVRAM content.

Configuring ACL CAM Carving on Z9000

Dell Force10 switches can operate in Hybrid mode, which enables OpenFlow and legacy functionality on the same switch. By default, ACL CAM space is not allocated for OpenFlow. To enable OpenFlow, you must reserve CAM space for OpenFlow using the following commands.

 **NOTE:** The commands to allocate CAM space for OpenFlow on Z9000 differ from the commands used for S4810.


Enter a value for `cam-acl`.


Select one of the following values for `cam-acl`:

- 0 (default): No space is allocated for OpenFlow. You must change this value to four or eight to enable OpenFlow.
- 4: Allocates space for up to 242 flow entries (14 entries are reserved for internal purposes from the 256 available flows, leaving 242 entries for use by OpenFlow).
- 8: Allocates space for up to 498 flow entries (14 entries are reserved for internal purposes from the 512 available flows, leaving 498 entries for use by OpenFlow).

The following sample Z9000 configuration reserves 512 entries for OpenFlow:

```
FTOS(conf)# cam-acl l2acl 2 ipv4acl 2 ipv6acl 0 ipv4qos 0 l2qos 1 l2pt 0  
ipmacacl 0 vman-qos 0 ecfmac1 0 openflow 8
```

 **NOTE:** For Z9000, the `cam-acl-vlan` value is set to 1 (enabled) by default; no additional configuration is required.


 **NOTE:** You must reboot the switch after changing the `cam-acl` values. If you do not reboot the switch, the configuration changes do not take effect.

If BMP 3.0 is enabled, use the command `reload conditional nvram-cfg-change` to perform a reload on the chassis to upgrade any configuration changes that have changed the NVRAM content.

OpenFlow Instances

This section describes how you can use OpenFlow instances on a switch.

- You can use up to eight OpenFlow instances on a switch; the OF ID range is 1–8.
- Only Transmission Control Protocol (TCP) connections are supported on Dell Force10 switches. Transport Layer Security (TLS) connections are not supported.
- Currently, you can configure only one controller IP and one TCP port for each OF instance.
- The connection is established when you enable the OF instance using the `no shut` command.

 **NOTE:** You cannot modify the OF instance while it is enabled. To make configuration changes, you must use the `shut` command on the OF instance, as shown below.

```
FTOS#show running-config openflow of-instance
!
openflow of-instance 1
  controller 1 10.11.205.184 tcp
  shutdown
FTOS#
```

- The `show openflow of-instance` command displays details on the instance, as shown below:

```
FTOS#show openflow of-instance 1

Instance           : 1
Admin State        : Down
Interface Type     : Port
DP Id              : 00:01:00:01:e8:8b:1a:30
Forwarding Tbls   : acl
Flow map           :
LB assist          : disabled
EchoReq interval  : 15 seconds
Connect interval  : 15 seconds
Number of Flows   : 0
Packets (acl)     : -
Bytes (acl)        : -
Controller 1      : TCP, 10.11.205.184/6633, not-connected
Controller 2      : -
Port List         :
Vlan List         :
Vlan Mbr list     :
```


OpenFlow Interfaces

This section describes how you can apply OpenFlow to specific interfaces.

- You can use the S4810 and Z9000 as Hybrid switches, allowing both OpenFlow (OF) and legacy functionality simultaneously.
- By default, all ports are available for legacy functionality.
- To enable OpenFlow, associate a port or VLAN to an OF instance. You can only do this when the OF instance is disabled (in a “shut” state).
- OpenFlow is supported with link aggregation groups (LAGs); for example, you can configure port channel interfaces as OF ports or as members of OF VLANs.

OF Ports

The following configuration example associates two ports (Te 0/7 and Te 0/31) to of-instance 1:

```
FTOS(conf)#interface tengigabitethernet 0/7
FTOS(conf-if-te-0/7)#of-instance 1
FTOS(conf-if-te-0/7)#interface tengigabitethernet 0/31
FTOS(conf-if-te-0/31)#of-instance 1
FTOS(conf-if-te-0/31)#
```


To see the list of ports associated with an OF instance, use the `show openflow of-instance` command. The number displayed in parentheses is the port ID sent to the controller (for example., Te 0/7 is sent to the controller as of-port 8, as shown below).

```
FTOS#show openflow of-instance 1

Instance           : 1
Admin State        : Up
Interface Type     : Port
DP Id              : 00:01:00:01:e8:8b:1a:30
Forwarding Tbls   : acl
Flow map           :
LB assist          : disabled
EchoReq interval  : 15 seconds
Connect interval  : 15 seconds
Number of Flows    : 1 (acl:1)
Packets (acl)     : 0
Bytes (acl)        : 0
Controller 1      : TCP, 10.11.205.184/6633, connected (equal)
Controller 2      : -
Port List
                  : Te 0/7 (8), Te 0/31 (32)
Vlan List          :
Vlan Mbr list     :
```

OF VLANs


Instead of assigning an entire port to an OF instance, you can assign a VLAN to an OF instance. You must do this when the VLAN is created. You must enter OF VLAN members in the same way as a legacy VLAN.

 **NOTE:** You can only create OF VLANs when the associated instance is disabled (in a “shut” state).

There is an “interface-type” parameter in each instance. By default, this parameter is set to “port,” indicating that the instance is used for OF ports. To use an instance in OF VLANs, change this parameter to “vlan,” as shown below:

```
FTOS(conf)#openflow of-instance 1
FTOS(conf-of-instance-1)#interface-type vlan
FTOS(conf-of-instance-1)#
```

To use both OF ports and OF VLANs, set the interface type to “any.”

 **NOTE:** Dell Force10 does not recommend using the interface type “any” unless both OF ports and OF VLANs are required in a single instance. If you use the “any” interface type, the number of ACL flows available to the controller is reduced by half (for example, to 128 of 256 available entries or to 256 of 512 available entries).

The following configuration example associates VLAN 100 (with tagged members Te 0/0 and Te 0/1) to of-instance 1:

```
FTOS(conf)#interface vlan 100 of-instance 1
FTOS(conf-if-vl-100)#tagged tengigabitethernet 0/0
FTOS(conf-if-vl-100)#tagged tengigabitethernet 0/1
FTOS(conf-if-vl-100)#no shutdown
FTOS(conf-if-vl-100)#
```

Use the `show openflow of-instance` command to display the OF VLANs and OF VLAN members associated with the OF instance, as shown below:

```
FTOS#show openflow of-instance

Instance          : 1
Admin State       : Up
Interface Type    : Vlan
DP Id             : 00:01:00:01:e8:8b:1a:30
Forwarding Tbls  : acl
Flow map          :
LB assist         : disabled
EchoReq interval: 15 seconds
Connect interval: 15 seconds
Number of Flows  : 0
Packets (acl)    : -
Bytes (acl)       : -
Controller 1     : TCP, 10.11.205.184/6633, connected (equal)
Controller 2     : -
Port List        :

Vlan List       :
                  : v1 100
Vlan Mbr list  :
                  : Te 0/0 (1), Te 0/1 (2)
```

SDN Commands

The following commands are for Software Defined Networking (SDN) OpenFlow commands.

- [connect retry-interval](#)
- [controller](#)
- [debug openflow packets](#)
- [flow-map](#)
- [interface-type](#)
- [learning-switch-assist](#)
- [multiple-fwd-table](#)
- [of-instance \(Interface\)](#)
- [openflow of-instance](#)
- [show openflow](#)
- [show openflow flows](#)
- [shutdown](#)

connect retry-interval

Configure the timed interval (in seconds) that the OpenFlow (OF) instance will wait after requesting a connection with the OpenFlow controller.

Z-Series, S4810

Syntax	<code>connect retry-interval <i>interval</i></code>	
Parameter	<i>interval</i>	Enter the number of seconds the OF instance will wait after attempting to establish a connection with OF controller. Range is 10–60.
Defaults	15 (seconds)	
Command Modes	OPENFLOW INSTANCE	
Command History	Version 9.1(0.0)	Introduced on Z9000 and S4810.
Usage Information	After the interval time lapses, the OpenFlow instance will reattempt to establish a connection to the OpenFlow controller.	
Related Commands	openflow of-instance Create or modify an OpenFlow instance.	

controller

Specify the OpenFlow controller configuration that the OpenFlow instance uses to establish a connection.

Z-Series, S4810

Syntax `controller {controller-id} {ip-address} [port port-number] tcp`

Parameter

<i>controller-id</i>	Enter the controller number (must be 1).
<i>ip-address</i>	Enter the IP address of the controller.
port <i>port-number</i>	Enter the keyword port followed by the port number to use for the connection. Range is 1 to 65535.

Defaults Default port number for the TCP connection is 6633.

Command Modes OPENFLOW INSTANCE

Command History

Version 9.1(0.0)	Introduced on Z9000 and S4810.
-------------------------	--------------------------------

Usage Information The controller number must be entered as 1 to enable OpenFlow. Currently, only TCP connection is supported.

Related Commands [openflow of-instance](#) Create or modify an OpenFlow instance.

debug openflow packets

Enable debugging for OpenFlow packets.

Z-Series, S4810

Syntax `debug openflow packets {packet-type packet-type} of-instance {of-id}`

Parameter

{<i>packet-type</i> <i>packet-type</i>}	Enter the keyword packet-type followed by one of the following packet types:
all	Enable debugging for all packets.
barrier-reply	Enable debugging for barrier-reply packets.
barrier-request	Enable debugging for barrier-request packets.
echo-reply	Enable debugging for echo-reply packets.
echo-request	Enable debugging for echo-request packets.
error	Enable debugging for error packets.

features-reply	Enable debugging for features-reply packets.
flow-mod	Enable debugging for flow-mod packets.
flow-removed	Enable debugging for flow-removed packets.
get-config-reply	Enable debugging for get-config-reply packets.
get-config-request	Enable debugging for get-config-request packets.
hello	Enable debugging for hello packets.
packet-in	Enable debugging for packet-in packets.
packet-out	Enable debugging for packet-out packets.
port-mod	Enable debugging for port-mod packets.
port-status	Enable debugging for port-status packets.
queue-get-config-reply	Enable debugging for queue-get-config-reply packets.
queue-get-config-request	Enable debugging for queue-get-config-request packets.
set-config	Enable debugging for set-config packets.
stats-reply	Enable debugging for stats-reply packets.
stats-request	Enable debugging for stats-request packets.
vendor	Enable debugging for vendor packets.

of-instance {of-id} Enter the keyword **of-instance** followed by the OF instance ID.

Defaults None

Command Modes EXEC

Command History
Version 9.1(0.0) Introduced on Z9000 and S4810.

Usage Information If debugging needs to be enabled for all packets, use the `debug openflow packets packet-type all` command.

Related Commands [reload conditional nvram-cfg-change](#)

flow-map

Specify if flows installed by the controller should be interpreted by the switch for placement in L2 or L3 tables.


Z-Series, S4810

Syntax	<code>flow-map {l2 l3} enable</code>	
Parameter	l2	Enter l2 to interpret Layer 2 flows.
	l3	Enter l3 to interpret Layer 3 flows.
Defaults	None (not enabled)	
Command Modes	OPENFLOW INSTANCE	
Command History	Version 9.1(0.0)	Introduced on Z9000 and S4810.
Usage Information	L2 flow-mapping is not supported on OpenFlow instances with an interface-type of "port."	
Related Commands	openflow of-instance Create or modify an OpenFlow instance.	

interface-type

Specify the type of interface (port, VLAN, or any) for the OpenFlow instance.

Z-Series, S4810

Syntax	<code>interface-type {any port vlan}</code>	
Defaults	port	
Parameter	<i>any</i>	Enter the keyword <i>any</i> to enable configuration of physical interfaces, LAGs, and VLANs on the selected OF instance.
	<i>port</i>	Default. Enter the keyword <i>port</i> to enable configuration of LAGs or physical interfaces on the selected OF instance.
	<i>vlan</i>	Enter the keyword <i>vlan</i> to enable configuration of VLANs on the selected OF instance.
		NOTE: You must associate the OF instance with the VLAN when the VLAN is created.
Command Modes	OPENFLOW INSTANCE	
Command History	Version 9.1(0.0)	Introduced on Z9000 and S4810.

Example (VLAN interface type)

```
FTOS (conf) #openflow of-instance 1
FTOS (conf-of-instance-1) #interface-type vlan
FTOS (conf-of-instance-1) #
```

Usage Information

Dell Force10 does not recommend selecting *any* for the interface-type unless both of-ports and of-vlans are required in a single instance. If *any* is selected for the interface-type, the number of available ACL flows is reduced by half (128 of 256 entries or 256 of 512 entries).

Legacy LLDP must be disabled on of-ports to avoid conflicts with the controller's version of LLDP.

Dell Force10 does not recommend configuring global STP instances on ports using both legacy VLANs and OF VLANs.

Related Commands

[openflow of-instance](#) Create or modify an OpenFlow instance.

learning-switch-assist

Specify if learning bridge flows need to be interpreted by the switch.

Z-Series, S4810

Syntax

```
learning-switch-assist enable
```

Defaults

Disabled

Command Modes

OPENFLOW INSTANCE

Command History

Version 9.1(0.0) Introduced on Z9000 and S4810.

Usage Information

This command is used for OpenFlow instances with an interface-type of either *vlan* or *any* to allow the switch to interpret flows and update L2 tables to reduce the number of flows installed for VLANs.

Related Commands

[openflow of-instance](#) Create or modify an OpenFlow instance.

[interface-type](#) Select the OpenFlow instance interface type (port, VLAN, or any).

multiple-fwd-table enable

Advertise all forwarding tables (IFP, VLAN, L2, and L3) to the controller.

Z-Series, S4810

Syntax

```
multiple-fwd-table enable
```

Defaults

Disabled

Command Modes

OPENFLOW INSTANCE

Command History

Version 9.1(0.0) Introduced on Z9000 and S4810.

Usage Information	This is a vendor-specific CLI.
Related Commands	openflow of-instance Create or modify an OpenFlow instance.

of-instance (Interface)

Add a physical interface or LAG to an OpenFlow instance.

Z-Series, S4810

Syntax	<code>of-instance of-id</code>
Parameter	<i>of-id</i> Enter the OpenFlow instance ID. Range is 1 to 8.
Command Modes	INTERFACE MODE
Command History	Version 9.1(0.0) Introduced on Z9000 and S4810.
Example	<p>In the following example, the ports Te 0/7 and Te 0/31 are associated with of-instance 1:</p> <pre>FTOS(conf)#interface tengigabitethernet 0/7 FTOS(conf-if-te-0/7)#of-instance 1 FTOS(conf-if-te-0/7)#interface tengigabitethernet 0/31 FTOS(conf-if-te-0/31)#of-instance 1 FTOS(conf-if-te-0/31)#</pre>
Usage Information	<p>To enable OpenFlow, associate a port or a VLAN to an OF instance. Ports and VLANs must be associated when the OF instance is created and in a “shut” state (<code>shutdown</code>).</p> <p>LAGs or port-channel interfaces are supported as of-ports or of-vlan members on OpenFlow.</p> <p>By default, all ports are available for legacy functionality.</p> <p>The following features are not supported on physical interfaces associated with an OpenFlow instance:</p> <ul style="list-style-type: none"> • Dot1x • Ethernet • GVRP • IPv4 • IPv6 • MAC • MTU • Port-channel protocols • Spanning-tree protocols • Switchport <p>The following features are not supported on LAGs associated with an OpenFlow instance:</p> <ul style="list-style-type: none"> • Ethernet

- GVRP
- IPv4
- IPv6
- MAC
- MTU
- Spanning-tree protocols
- Switchport

Related Commands [openflow of-instance](#) Create or modify an OpenFlow instance.

openflow of-instance

Create an OpenFlow (OF) instance or modify an existing OpenFlow instance.

Z-Series, S4810

Syntax `openflow of-instance of-id`

Parameters

of-id Enter the number of the OF instance. Range is 1 to 8.

If you are creating a new OF instance, enter the number you want to assign to the OF instance.

If you are modifying an existing OF instance, enter the number of the instance you want to change.



NOTE: You must disable the OF instance before making any configuration changes.

Defaults none

Command Modes CONFIGURATION

Command History
Version 9.1(0.0) Introduced on Z9000 and S4810.

Usage Information

- Stacking for S4810, controller High Availability, and VLT are not supported on OF instances.
- To enable OpenFlow on S4810, the stack unit number must be zero.
- Up to eight OF instances can be created.
- To establish a connection with the controller, you must enable the OF instance using the `no shutdown` command.
- To modify the OF instance, you must disable the OF instance first using the `shutdown` command.
- One controller IP and one TCP port can be configured for each OF instance.
- The number of supported flows depends on the flow type. The following table provides the number of supported flows for each flow type:

Flow Type	Maximum Number of Available Flows
ACL	256 or 512 (depending on ACL CAM carving)

Flow Type	Maximum Number of Available Flows
L2	48,000
LB	24,000
L3	6,000

- If the time or date on the system clock is changed, you must disable and re-enable all existing OpenFlow instances to avoid session timeout issues.

**Related
Commands**

[shutdown](#) — Enable or disable the OpenFlow instance.

[show openflow](#) — Display general information about OpenFlow instances.

[controller](#) — Specify the OpenFlow controller configuration that the OpenFlow instance uses to establish a connection.

show openflow

Display general information about OpenFlow instances.

Z-Series, S4810

Syntax `show openflow [of-instance of-id]`

Parameter

of-instance *of-id* (OPTIONAL)

Enter the keyword **of-instance** to display information such as administrative state, interface-type, and operational state for all OpenFlow instances.

(OPTIONAL) Enter the keyword **of-instance** followed by the OF instance ID to display details for the specified OF instance. Range is 1 to 8.

Defaults None

Command Modes EXEC

Command History

Version 9.1(0.0) Introduced on Z9000 and S4810.

Example

```
FTOS#show openflow of-instance 1
Instance           : 1
Admin State        : Down
Interface Type     : Port
DP Id              : 00:01:00:01:e8:8b:1a:30
Forwarding Tbls   : acl
Flow map           :
LB assist          : disabled
EchoReq interval  : 15 seconds
Connect interval  : 15 seconds
Number of Flows   : 0
Packets (acl)     : -
Bytes (acl)        : -
Controller 1      : TCP, 10.11.205.184/6633, not-connected
Controller 2      : -
Port List         :
```

```
Vlan List      :
Vlan Mbr list  :
```

Usage Information Use the `show openflow` command to display general information such as version, capabilities, and supported actions.

Related Commands [openflow of-instance](#) Create or modify an OpenFlow instance.

show openflow flows

Display detailed information about OpenFlow instances.

Z-Series, S4810

Syntax `show openflow flows [of-instance {of-id}] [table {acl|lb|mac|route|vlan} flow-id {flow-id}]`

Parameter

of-instance of-id	Enter the keyword of-instance followed by the OF instance ID to display details of all flows installed for the specified OF instance. Range is 1 to 8.
table acl / lb / mac / route / vlan flow-id flow-id	Enter the keyword table followed by the table type and the keyword flow-id followed by the flow ID to display details for the specified flow:
acl	Display ACL table information.
lb	Display learning bridge table information.
mac	Display MAC table information.
route	Display routing table information.
vlan	Display VLAN table information.

Defaults None

Command Modes EXEC

Command History **Version 9.1(0.0)** Introduced on Z9000 and S4810.

Related Commands [show openflow](#) Display general information about OpenFlow instances.

shutdown (OpenFlow Instance)

Enable or disable the OpenFlow instance.

Z-Series, S4810

Syntax `[no] shutdown`

Defaults	Disabled (<code>shutdown</code>)
Command Modes	OPENFLOW INSTANCE
Command History	Version 9.1(0.0) Introduced on the S4810 and Z9000.
Usage Information	<p>Use the <code>no shutdown</code> command to enable the OpenFlow instance. When the <code>no shutdown</code> command is used, the OpenFlow instance sends a request to the OpenFlow controller to establish a connection.</p> <p>Use the <code>shutdown</code> command to disable an OpenFlow instance. You must use the <code>shutdown</code> command before making any configuration changes to the OpenFlow instance.</p> <p>All OpenFlow instances are disabled by default.</p>
Related Commands	<p>openflow of-instance Create or modify an OpenFlow instance.</p> <p>controller Configure the controller used by OpenFlow.</p>